

Advantech AE Technical Share Document

Date	2018 / 10 / 19	Release Note	■ Internal External	
Category	□FAQ ■SOP	Related OS	Android, Windows	
Abstract	How to update BIOS under EFI shell on AIMx8 series			
Keyword	AIM10, AIM38, AIM58, AIM68			
Related Product				

 Description: This SOP will guide you to flash BIOS under EFI Shell (work with Android and Windows SKU)

■ Preparation:











Enabling an Intelligent Planet Version:1.0


Step 1: Copy BIOS files to a FAT32 USB drive and must put files under root directory.

📗 efi	2017/10/18 上午	檔案資料夾	
flash.nsh	2017/9/29 上午 1	NSH 檔案	1 KB
H2OFFT-Sx64.efi	2016/11/3 下午 0	EFI 檔案	608 KB
platform.ini	2017/6/12 下午 0	INI 檔案	51 KB
v220.fd	2017/9/29 上午 0	FD 檔案	8,192 KB

Step 2: Boot up system, please press "ESC" several times until it go into BIOS.

Step 3: Please select "Boot Manager" and Select "EFI USB Device".



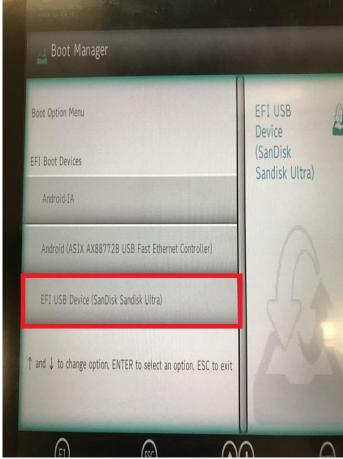






Step 4: Type "fs1:" which depends on the system to detect your USB drive.

```
bik12 :BlockDevice - Alias (null)
PciRoot(0x0)/Pci(0x10, 0x0)/Ctrl(0x1)
bik13 :BlockDevice - Alias (null)
PciRoot(0x0)/Pci(0x10, 0x0)/Ctrl(0x2)
bik14 :Removable BlockDevice - Alias (null)
PciRoot(0x0)/Pci(0x14, 0x0)/USB(0x1, 0x0)/USB(0x0, 0x0)/USB(0x3, 0x0)/USB(0x2, 0x0)
Press ESC in 1 seconds to skip startup.nsh, any other key to continue.

Shell> fs1:\> __
```

Step 5: Type "flash.nsh", the system will start to flash BIOS.

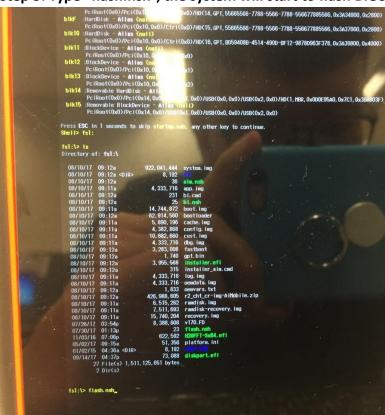



Step 6: After flash BIOS is done, the system will reboot.